



МАРТ

E-MART
ВАШ ПОСТАВЩИК
HIKVISION

<https://emart.su/brands/hikvision/>

Федеральный
Санкт-петербург
Москва
Краснодар

8 800 511-77-41
8 812 426-99-66
8 495 137-99-67
8 861 205-62-66

www.emart.su

mail@emart.su



How to Use P2P Function on Door Station


Title:	How to Use P2P Function on Door Station	Version:	v1.0	Date:	25/04/2025
Product:	Video Intercom			Page:	1 of 3

Preparation


1. A sip phone (or other client) supports P2P calling function, we take Hikvision DS-KP6000-HE1 sip phone as example.
2. A door station supports P2P calling function, we take Hikvision DS-KD8003-IME1(B) V3.7.1 door station for example.
3. Make sure the 2 devices are in the same LAN network.

How to Use P2P Function on Door Station

1. Enable P2P from door station side


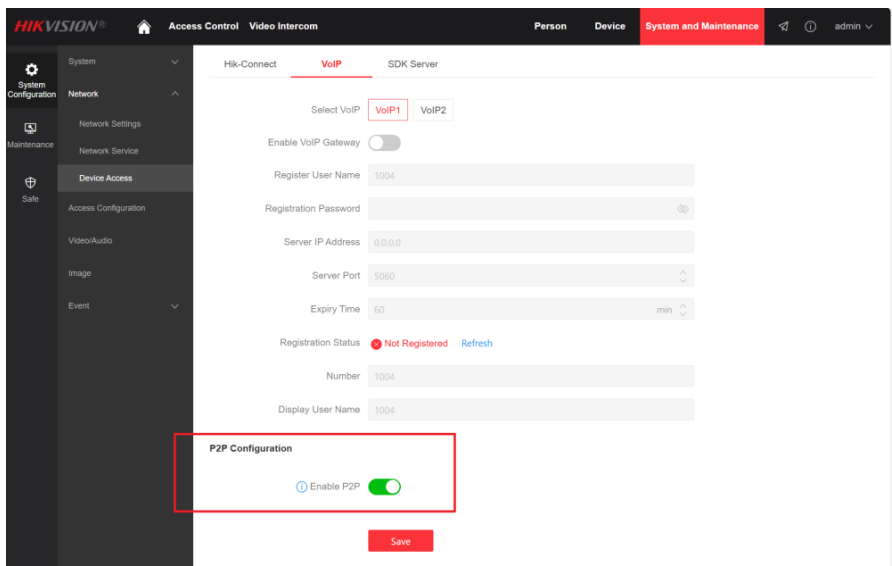


2. Link a room number to the SIP phone's ip address

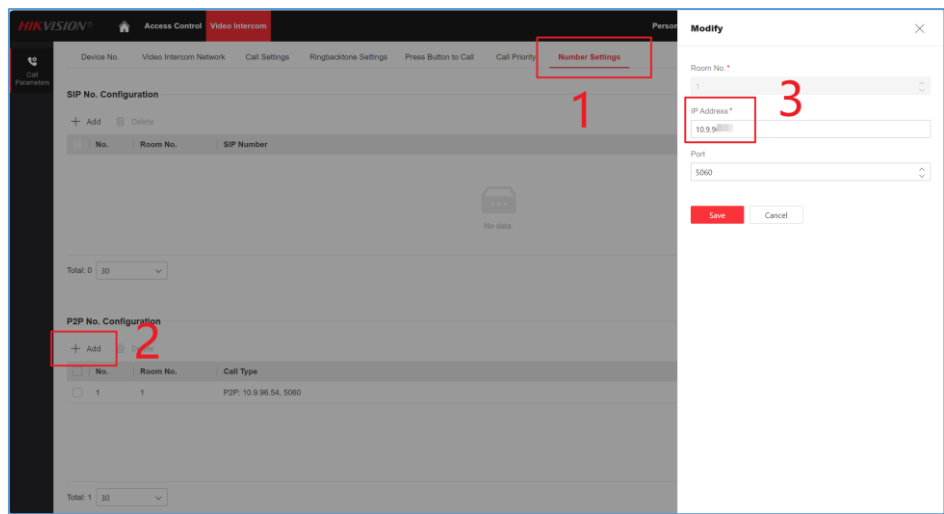


3. (Optional) Link the call button to any empty room No. if the nametag module is used.

Title:	How to Use P2P Function on Door Station	Version:	v1.0	Date:	25/04/2025
Product:	Video Intercom			Page:	2 of 3

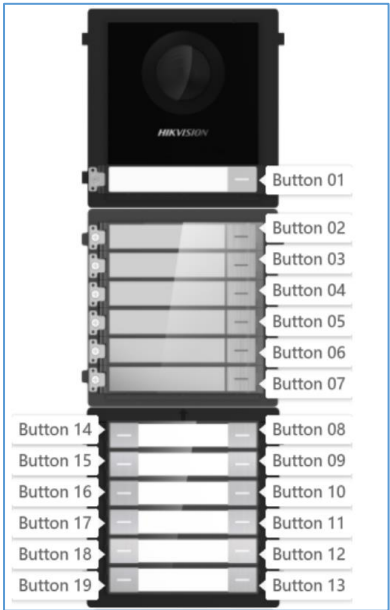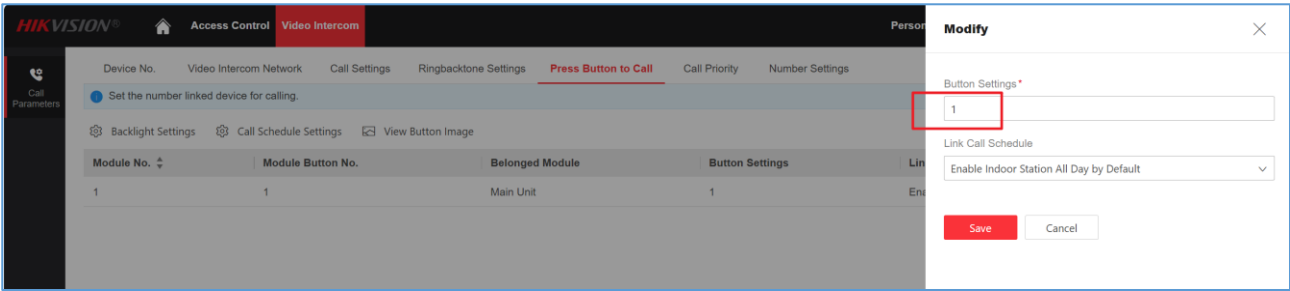



4. Please contact with your SIP phone provider and check how to enable P2P calling and other related settings from SIP phone side, here we take Hikvision DS-KP6000-HE1 sip phone as example. And **cancel** the option “**Enable Strict UA Match**”

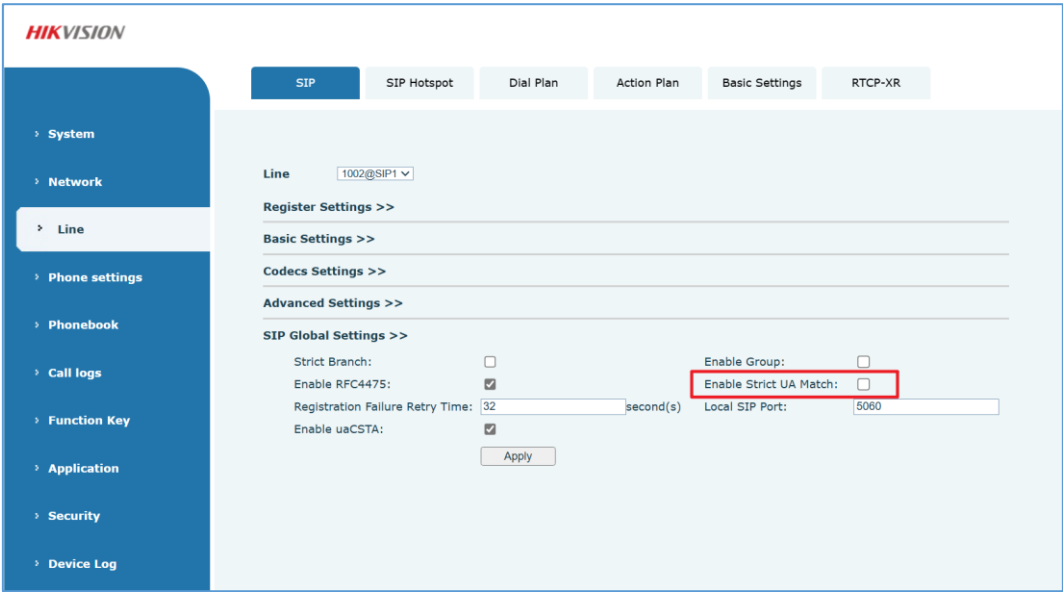

Title:	How to Use P2P Function on Door Station	Version:	v1.0	Date:	25/04/2025
Product:	Video Intercom			Page:	3 of 3

5. Press call button from door station side, then the SIP phone will ring.

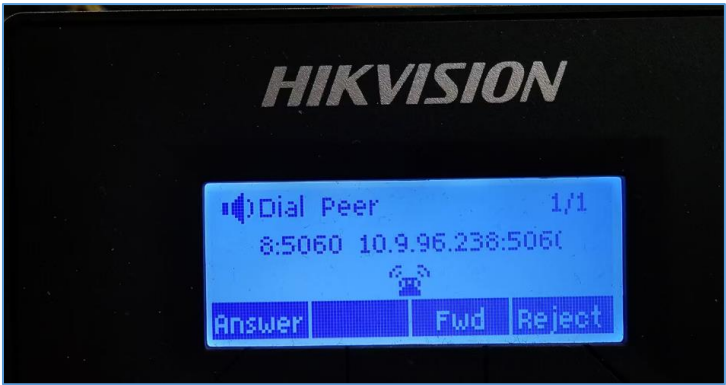

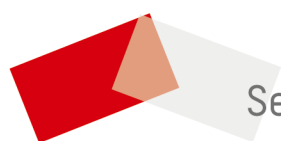

See Far, Go Further